

# Travel Alarm Clock

OWNER'S MANUAL — Please read before using this equipment.

## REPLACING THE BATTERY

Your alarm clock comes with one LR44 button cell battery (installed) for power. Before using the clock, remove the plastic insulating strip from the compartment. When the clock stops working or dims, replace the battery. For the best performance and longest life, we recommend a RadioShack alkaline battery.

**Caution:** Use only a fresh battery of the required size and recommended type.

1. Pull up the battery compartment cover on the back of the clock to remove the battery.
2. Place an LR44 (1.5V) button cell battery inside the compartment with its positive side (+) up.
3. Replace the cover.

### Warnings:


- Dispose of old batteries promptly and properly. Do not burn or bury them.
- Keep button-cell batteries away from children. Swallowing a button-cell battery can be fatal.

## OPENING THE COVER





Your travel alarm clock has a panel cover that prevents you from accidentally pressing a button. It also serves as a stand, so you can place the clock on a table or other flat surface. Lift the cover to view the clock, then adjust the cover until the clock stands upright. GMT (Greenwich Mean Time) conver-

sions are listed on the inside of the cover as a reference for standard time conversions.

## SETTING THE TIME

1. Slide  to **OFF**.
2. Press or hold down **H** until the desired hour appears. **AM** or **PM** appears to indicate an AM or PM hour.
3. Press or hold down **M** until the desired minute appears.

## USING THE ALARM

1. Slide  to **SET**.  and the currently set alarm time appear.
2. Press or hold down **H** until the desired alarm hour appears. **AM** or **PM** appears to indicate an AM or PM alarm time.
3. Press or hold down **M** until the desired alarm minute appears.
4. Slide  to **ON**. At the preset alarm time, the clock beeps for about two minutes or until it is turned off.
5. Slide  to **OFF** to turn off the alarm.

CARE

Keep the clock dry; if it gets wet, wipe it dry immediately. Use and store the clock only in normal temperature environments. Handle the clock carefully; do not drop it. Keep the clock away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the clock's internal components can cause a malfunction and might invalidate its warranty. If your clock is not performing as it should, take it to your local RadioShack store for assistance.

**Note:** Do not allow your travel alarm clock to come into contact with water.

SPECIFICATIONS

Power ..... LR44 Button Cell Battery  
Dimensions ..... 4 1/8 x 1 5/16 x 7/16 inches (104.5 x 33.2 x 10.7 mm)  
Weights (without battery) ..... 0.94 oz (26.76 g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

**Limited One-Year Warranty**

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lighting or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

*We Service What We Sell*

12/99